


WIRING CONTINUED.




STEP 6

Splice the relay trigger to the Pink wire at the headlight plug.

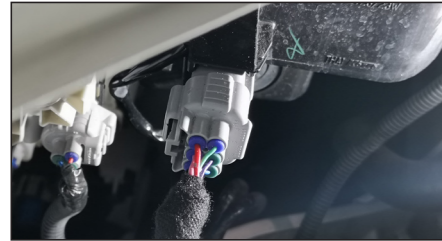

STEP 7

Feed the cable for the light through the bulkhead grommet.

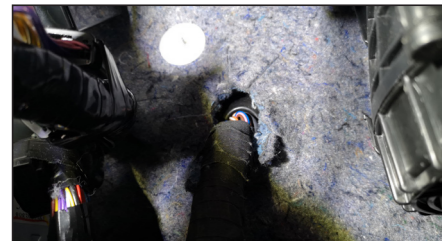

STEP 8

The cable will enter the cabin inside the passenger footwell.



STEP 9

Run the cable up the A pillar and secure with cable ties.



STEP 10

Connect the lamp cable to the feed cable using the included splice connectors.

TEST LIGHT BAR IS WORKING CORRECTLY BEFORE YOU RE-ASSEMBLE VEHICLE

TECHNICAL SUPPORT

aaron@lazerlamps.com / sales@lazerlamps.com
+44 (0)1992 945601 / +44 (0)1992 677374

WHAT'S INCLUDED

- 2x Stainless Steel Mounting Bracket (LH/RH)
- 1x Anti-Theft Fastener Set (Various Sizes)
- 1x Spacer Set (Various Sizes)
- 4x Rivets
- 1x Cable Grommet
- 1x VHB Cleaning Sachet
- 2x Butt Connectors

DIFFICULTY LEVEL



TOOLS REQUIRED



LAZER
HIGH PERFORMANCE LIGHTING


WWW.LAZERLAMPS.COM

+44 (0)1992 677374
sales@lazerlamps.com

Lazer Lamps Ltd, Units 1&2 Harlow Mill Business Centre,
Riverway, Harlow, Essex. CM20 2FD. United Kingdom



LAZER
HIGH PERFORMANCE LIGHTING

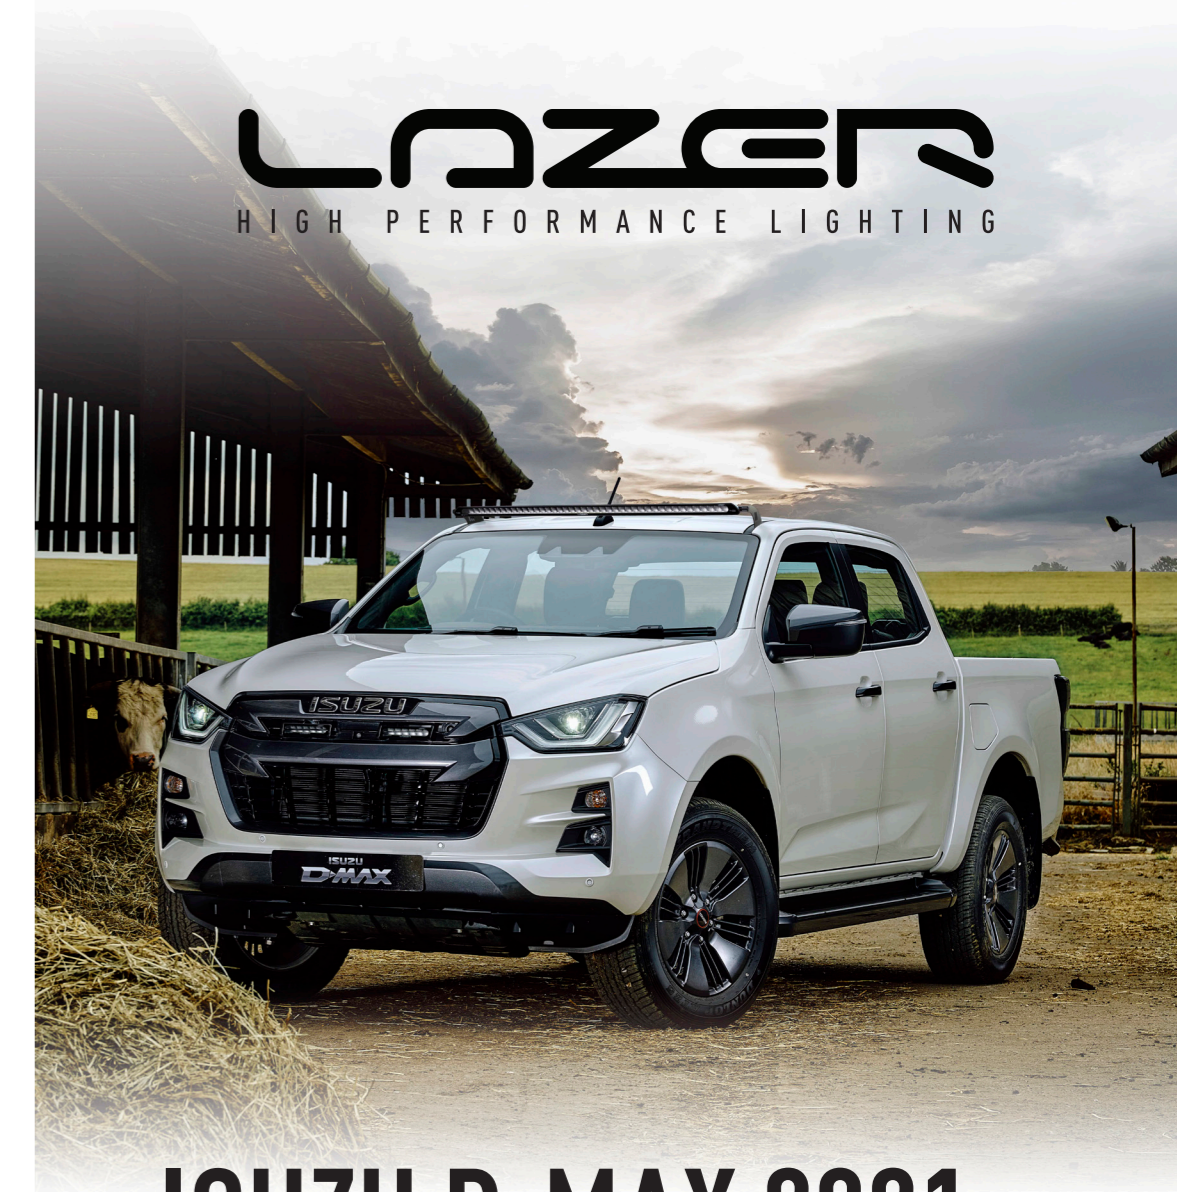

ISUZU D-MAX 2021+
ROOF MOUNTING KIT FOR VEHICLES
WITHOUT ROOF RAILS

FITTING INSTRUCTIONS

PRE-INSTALLATION CHECKS

Ensure battery is disconnected.

LOWERING FRONT HEADLINING



STEP 1

Remove grab handles on both driver and passenger side.



STEP 2

Remove A pillar trims on both driver and passenger side.



STEP 3

Unscrew the visor, unplug the vanity light and remove.
Repeat for both sides.



STEP 4

Using a flat blade screw driver, push the retaining clip in and remove the visor clip and unscrew the front overhead grab handle on both sides of the vehicle.



STEP 5

Using a plastic trim tool, lower the front interior light down (no need to unplug).

INSTALLING THE BRACKETS



STEP 1

Carefully peel back the front of the roof ditch moulding on both sides of the vehicle.



STEP 2

On both sides of the vehicle, mark 40mm from the windscreen to where the brackets will sit.



STEP 3

Place the brackets on the roof ditch at 40mm mark and mark out the x2 drill points.



STEP 4

Drill the x2 marked points to 5mm.



STEP 5

Apply sealant to the underside of the brackets to create a watertight seal.

INSTALLING THE BRACKETS CONTINUED.




STEP 6

Apply sealant through the drilled holes before you rivet the brackets onto the roof.



STEP 7

Rivet the brackets into place.

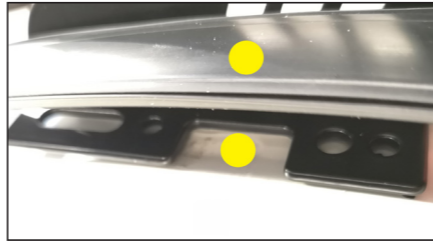

STEP 8

On the left hand side, mark out where you need to drill for cable entry.



STEP 9


Drill a 9.5mm hole through the roof ditch moulding on the left side only for cable entry.
Extreme care must be taken when drilling the holes to ensure you don't drill through to airbag.



STEP 10


Install the lamp onto the brackets using a 10mm spacer either side.

WIRING

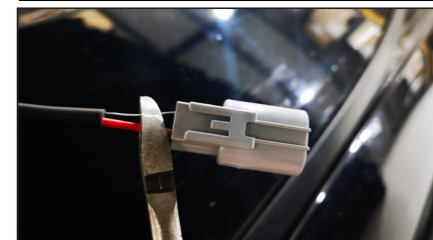

STEP 1

Cut the lamp connector off from the lamp's cable.

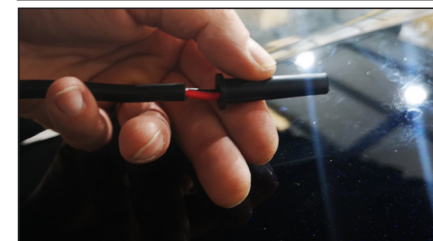

STEP 2

Slide the cable through the included grommet.



STEP 3

Feed the cable grommet through the roof ditch and into the cab.
Apply sealant before reinstalling the roof ditch moulding.



STEP 4

Apply sealant on the underside where the cable enters and the rivets protrude into the cab.



STEP 5

Connect the live and earth for the light harness.
Install relay in a suitable place, near the battery.

